

# Air Conditioning Systems

## There is water around the base of my condensing unit.

If you find water around the base of your condensing unit, it is most likely from normal operation. When the condensing unit is running on cooling, the suction line and accumulator will condensate. While the unit is running in heat if a heat pump, the condensing coils themselves will condensate and create water around the base of the unit. So it is normal for water to be



around the base of your condensing unit.

Unique solution ID: #1074

Author:

Last update: 2014-10-01 04:15