

## General troubleshooting

### My air conditioning system is set to cool and nothing is running?

If your system is set to cool and there is no air blowing inside your home and your condenser is not running, a lot of times a tripped float switch is the culprit. So check your float switch first. If you find that your float switch is tripped see the [tripped float switch faq](#). You next can check your breakers associated with your air conditioning system. If you find one is tripped see the [tripped breaker faq](#). If you find that your breakers are fine and float switch is not tripped you will need a service tech to come out and diagnose your system. You most likely have a problem in your low voltage circuit.

Unique solution ID: #1050

Author:

Last update: 2014-10-14 04:21